



800-504-5684
info@bigdogbumpers.com
www.bigdogbumpers.com

Chevrolet 1500 2007-2008 Grille Guard

Note: In order to install this model, cutting the air dam is required.

1) Cut air dam on the outside of tow hook 1" x 1". Slide main bracket through cutout.
(see figure 1)



Figure 1

2) Remove (3) nuts from bolts that hold tow hook in place. Do not remove bolts from holes. Install main bracket over exposed bolts and reinstall nuts.
(see figure 2)



Figure 2

3) Lift grille guard up to the brackets installed and secure in place with (6) 1/2" x 1 1/2" black carriage bolts provided. Moderately tighten to allow for adjustment.
(see figure 3)



Figure 3

4) Lift hood and remove (8) plastic pins that secure plastic radiator cover. Set aside for future installation. (see figure 4)



Figure 4

5) Remove (2) bolts found between factory grill and radiator above truck frame. Set aside for future installation. (see figure 5)

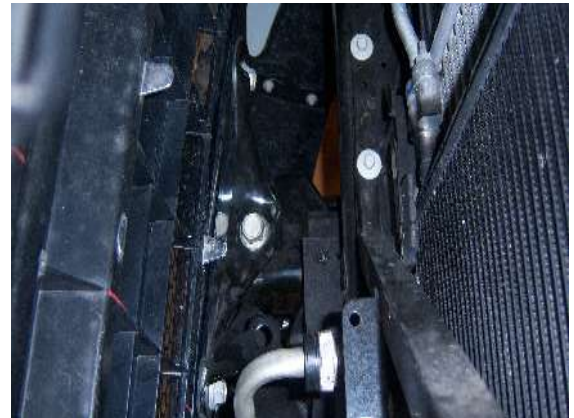


Figure 5

6) Slide top bracket provided between factory grill and factory bumper. Secure with bolts removed in step 5.

7) Secure opposite end of top bracket with (2) 1/2" x 1 1/2" black carriage bolts provided. (see figure 6)



Figure 6

8) Align grille guard and torque all bolts with 75 lbs of torque.

Installation Kit Provided:	(8) 1/2 "x 1 1/2 "
(1) main bracket right	black carriage bolts
(1) main bracket left	(8) 1/2" serrated nuts black
(1) top bracket right	(8) 1/2" flat washers black
(1) top bracket left	